 


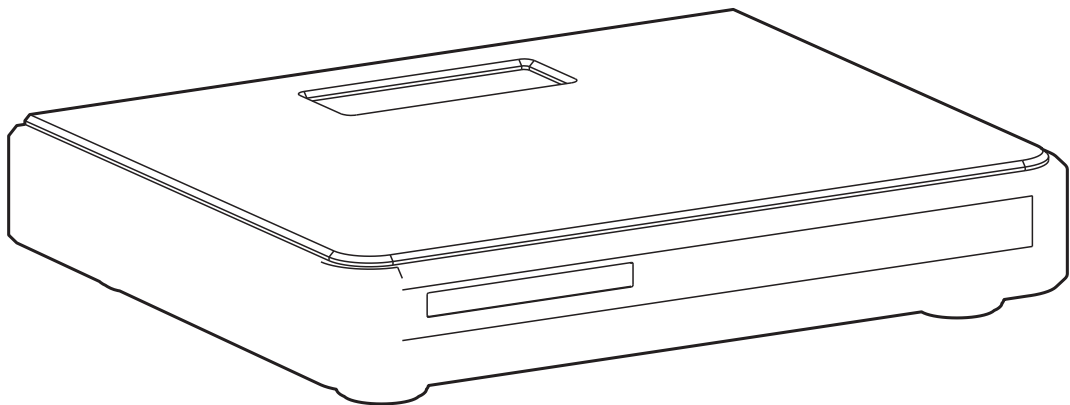

CD 1.2

 
真空管CD播放器
VACUUM TUBE CD PLAYER

 


警告

谨防触电
切勿打开机盖



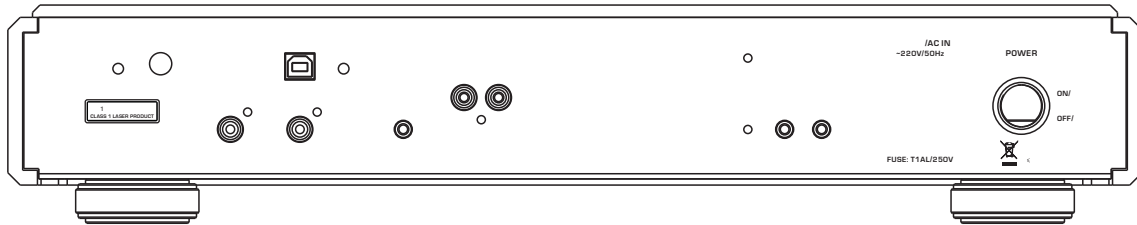

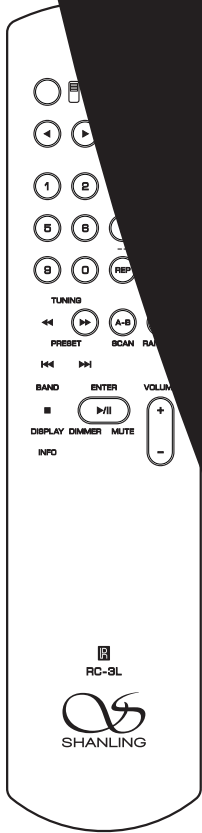

3.

WAV	*.wav
AAC	*.m4a *.3gp *.mp4
WMA	*.asf *.wma 16-bit pcm
MP3	*.mp3 *.mp2 *.mp1

4. 8K 16K 32K 11.025K
22.05K 44.1K 48K

USB

升频选择

1. [ASRC] "192K"

2. [ASRC] "192K"

停止/进出仓

1. [■/▲]

2. [■/▲]
[■]

播放/暂停

1. [▶/||]

2. [▶/||]

上一曲/下一曲

1. [◀◀]

2. [▶▶]

向后搜索/向前搜索

1. [◀◀]

2. [▶▶]

数字键选曲

1. 1 9 1
9

2. 10

USB

重复播放

1. [REP] "↻1"

"↻" [REP]

[REP]

2.

A-B片段重复播放

1. [A - B] "↻A-B"

[A - B] "↻A-B"

A B

[A - B]

2.

USB



SHANLI





RoHS
comp